


## SP-1366 INSTALLATION INSTRUCTIONS

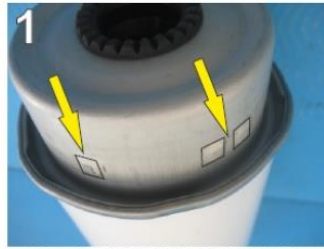

1  
LOCATE ON THE FILTER THE SINGLE AND THE DOUBLE NOTCHES




2  
LOCATE ON THE MOUNTING BASE THE CUTS FOR THE SINGLE AND THE DOUBLE NOTCHES



3  
SINGLE CUT IS UNDER HERE  
LOCATE THE LOCK SYMBOLS ON THE MOUNTING BASE. THE SINGLE CUT IS LOCATED EXACTLY IN THE MIDDLE OF THE 2 LOCK SYMBOLS



4  
PLACE THE FILTER WITH THE SINGLE NOTCH TO BE BETWEEN THE 2 LOCK SYMBOLS AND PUSH UP

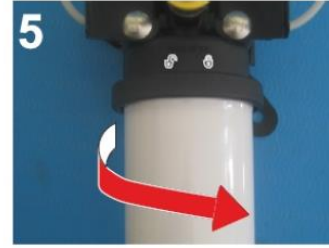

5  
ROTATE THE FILTER CLOCKWISE UNTIL YOU HEAR A "CLICK"